

ELECTRONIC STARTING SIGNAL

User's Manual





WARNING: TO PREVENT FIRE OR SHOK, DO NOT OPEN THE CASE, EXPOSE THIS UNIT TO TRAIN OR MOISTURE

PRODUCT FEATURES:

- 1. 3-in1 functions: Starting Pistol Sound for T&F; Whistle for Team Sports; Siren for swimming
- 2. Support Race Clock
- 3. Safety Transportation, Storage & Handling
- 4. Environmental friendly
- 5. Economical: 3 x 1,5V AA Alkine Batteries are easy to be purchased & capable to play more than 2K times.

FUNCTIONS:

- 1. Sound Choice: Starting Pistol Sound/ Siren/ Whistle
- 2. Light choice:
- a) Flash light spark in the same time of pistol, whistle or siren sound for umpire at finish line to push stopwatch.
- b) can also select no flash mode for power saving

WHAT IN THE BOX:

- 1. One electric Pistol
- 2. One screw driver
- 3. One communication cable for PA system usage



The batteries are not included in the package

GENERAL OPERATION:





1. Load 3 x 1.5V AA alkine batteries in the battery chamber.

(batteries are not included in the package)



2. Connect the AUX output port of pistol & Aux port of PA system with communication cable.





- 3. Switch to sound mode and POWER light turns on.
- 4. Select sound choice of Starting pistol sound, Whistle od Siren.
- 5. Under the Pistol mode, if the flash light is needed for umpire at finish (sound + light mode). When "CHARGED" line. slide the switch to light up, it means when you pull trigger, you will see flash and gun sound.





START – the pistol, whistle or siren sound goes off at the same time as the red flash light.



6. **FALSE START CALL BACK** – Pull trigger again

immediately and release the pistol sound. "CHARGED" will light up again in approx. 3.5 sec for restart.

- 7. If false start call back is not necessary, "CHARGED" will light up automatically in approx.
- 3.5 sec for next start.

CONNECT TO RACE CLOCK:

Connect the AUX output port of pistol



(S) & Aux port of **Race Clock** with stereo cable.

